



RoHS III  
COMPLIANT

UK  
CA

EAC





## Operating manual

### DA01 VUW

Differential pressure measuring device  
Pressure levels PN250/PN400

Standard version



## Masthead

**Manufacturer:****FISCHER Mess- und Regeltechnik GmbH**

Bielefelderstr. 37a  
D-32107 Bad Salzuflen

Telephone: +49 5222 974 0  
Telefax: +49 5222 7170

eMail: [info@fischermesstechnik.de](mailto:info@fischermesstechnik.de)  
web: [www.fischermesstechnik.de](http://www.fischermesstechnik.de)

**Technical editorial team:**

Documentation representative: T. Malischewski  
Technical editor: R. Kleemann

All rights, also those to the translation, reserved. No part of this document may be reproduced or processed, duplicated or distributed using electronic systems or any other form (print, photocopy, microfilm or another process) without the written consent of the company FISCHER Mess- und Regeltechnik GmbH, Bad Salzuflen.

Reproduction for internal use is expressly allowed.

Brand names and procedures are used for information purposes only and do not take the respective patent situation into account. Great care was taken when compiling the texts and illustrations; Nevertheless, errors cannot be ruled out. The company FISCHER Mess- und Regeltechnik GmbH will not accept any legal responsibility or liability for this.

Subject to technical amendments.



© FISCHER Mess- und Regeltechnik 2018

### Version history

Rev. ST4-A 11/15	Version 1 (first edition)
Rev. ST4-B 06/21	Version 2 (Correction product number key)
Rev. ST4-C 10/21	Version 5 (UKCA Conformity))
Rev. ST4-D 02/23	Version 6 (Liquid filling for inductive contacts)
Rev. ST4-E 02/24	Version 7 (liquid filling not applicable for contact device)

# Table of Contents

<b>1 Sicherheitshinweise</b>	<b>4</b>
1.1 General	4
1.2 Personnel Qualification	4
1.3 Risks due to Non-Observance of Safety Instructions	4
1.4 Safety Instructions for the Operating Company and the Operator	4
1.5 Unauthorised Modification	4
1.6 Inadmissible Modes of Operation	4
1.7 Safe working practices for maintenance and installation work	5
1.8 Pictogram explanation	5
<b>2 Product and functional description</b>	<b>6</b>
2.1 Delivery scope	6
2.2 Equipment versions	6
2.3 Function diagram	11
2.4 Design and mode of operation	11
<b>3 Assembly</b>	<b>12</b>
3.1 General information	12
3.2 Process connection	12
3.3 Electrical connections	13
<b>4 Commissioning</b>	<b>15</b>
4.1 General	15
4.2 Venting of the pressure lines	15
4.3 Zero point correction	16
4.4 Switch point setting	16
<b>5 Servicing</b>	<b>17</b>
5.1 Maintenance	17
5.2 Transport	17
5.3 Service	17
5.4 Disposal	17
<b>6 Technical Data</b>	<b>18</b>
6.1 Allgemeines	18
6.2 Input variables	19
6.3 Operating conditions	20
6.4 Construction design	20
<b>7 Order Codes</b>	<b>27</b>
7.1 Accessories	29
<b>8 EU Declarations of conformity</b>	<b>30</b>
<b>9 UKCA Declarations of Conformity</b>	<b>32</b>
<b>10 EAC Declaration</b>	<b>34</b>

# 1 Sicherheitshinweise

## 1.1 General

This operating manual contains basic instructions for the installation, operation and maintenance of the device that must be followed without fail. It must be read by the installer, the operator and the responsible specialist personnel before installing and commissioning the device.

This operating manual is an integral part of the product and therefore needs to be kept close to the instrument in a place that is accessible at all times to the responsible personnel.

The following sections, in particular instructions about the assembly, commissioning and maintenance, contain important information, non-observance of which could pose a threat to humans, animals, the environment and property.

The instrument described in these operating instructions is designed and manufactured in line with the state of the art and good engineering practice.

## 1.2 Personnel Qualification

The instrument may only be installed and commissioned by specialized personnel familiar with the installation, commissioning and operation of this product.

Specialized personnel are persons who can assess the work they have been assigned and recognize potential dangers by virtue of their specialized training, their skills and experience and their knowledge of the pertinent standards.

## 1.3 Risks due to Non-Observance of Safety Instructions

Non-observance of these safety instructions, the intended use of the device or the limit values given in the technical specifications can be hazardous or cause harm to persons, the environment or the plant itself.

The supplier of the equipment will not be liable for damage claims if this should happen.

## 1.4 Safety Instructions for the Operating Company and the Operator

The safety instructions governing correct operation of the instrument must be observed. The operating company must make them available to the installation, maintenance, inspection and operating personnel.

Dangers arising from electrical components, energy discharged by the medium, escaping medium and incorrect installation of the device must be eliminated. See the information in the applicable national and international regulations.

Please observe the information about certification and approvals in the Technical Data section.

## 1.5 Unauthorised Modification

Modifications of or other technical alterations to the instrument by the customer are not permitted. This also applies to replacement parts. Only the manufacturer is authorised to make any modifications or changes.

## 1.6 Inadmissible Modes of Operation

The operational safety of this instrument can only be guaranteed if it is used as intended. The instrument model must be suitable for the medium used in the system. The limit values given in the technical data may not be exceeded.

The manufacturer is not liable for damage resulting from improper or incorrect use.



## 1.7 Safe working practices for maintenance and installation work

The safety instructions given in this operating manual, any nationally applicable regulations on accident prevention and any of the operating company's internal work, operating and safety guidelines must be observed.

The operating company is responsible for ensuring that all required maintenance, inspection and installation work is carried out by qualified specialized personnel.

## 1.8 Pictogram explanation



### **DANGER**

#### Type and source of danger

This indicates a **direct** dangerous situation that could lead to death or **serious injury** (highest danger level).

1. Avoid danger by observing the valid safety regulations.



### **WARNING**

#### Type and source of danger

This indicates a **potentially** dangerous situation that could lead to death or **serious injury** (medium danger level).

1. Avoid danger by observing the valid safety regulations.



### **CAUTION**

#### Type and source of danger

This indicates a **potentially** dangerous situation that could lead to slight or serious injury, damage or **environmental pollution** (low danger level).

1. Avoid danger by observing the valid safety regulations.



### **NOTICE**

#### Note / advice

This indicates useful information of advice for efficient and smooth operation.

## 2 Product and functional description


### 2.1 Delivery scope

- Differential pressure measuring device DA01
- Operating Manual

### 2.2 Equipment versions

The following illustrations depict typical combinations of the measuring cell, measured value display and contact elements. However, these can be freely combined according to the order code. Wherever this is not possible, this is clearly stated.

For instance, a small measuring cell with an NG160 display and a contact element is also available.

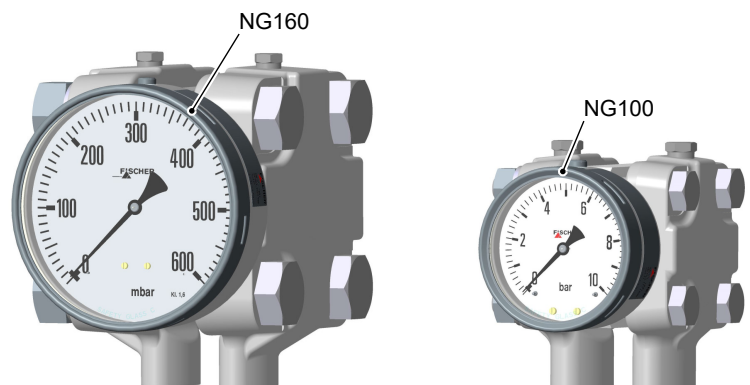

**Large measuring cell Ø130**  
(mbar ranges)

**Small measuring cell Ø75**  
(bar ranges)

Fig. 1: Device overview

#### 2.2.1 Process connection

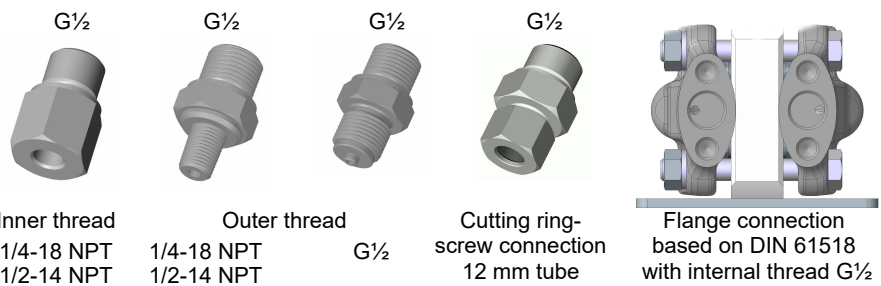


Fig. 2: Options for the process connection

### 2.2.2 Nameplate


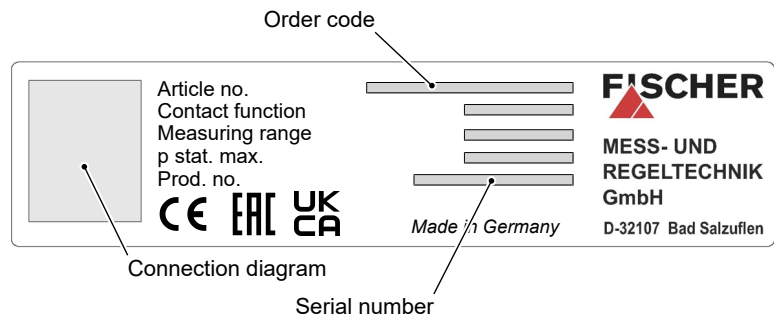


Fig. 3: Nameplate

### 2.2.3 Contact devices


**NOTICE! No changeover contacts possible**

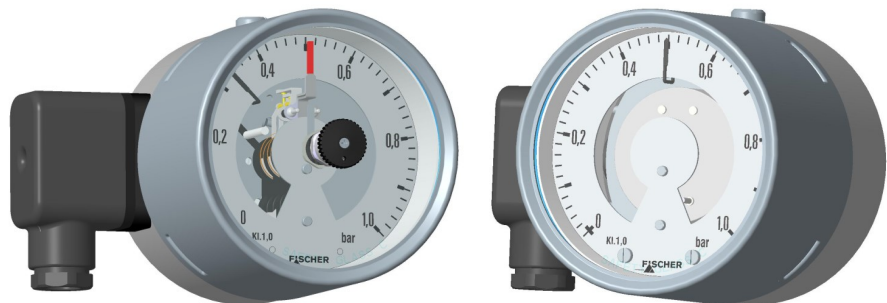

Limit switch in accordance with data sheet KE##	Rotation angle encoder in accordance with data sheet KE09
for standard devices	
<ul style="list-style-type: none"> <li>• Low-action contacts</li> <li>• Snap-actiocontacts</li> <li>• Inductive contacts</li> </ul>	<ul style="list-style-type: none"> <li>• KINAX 3W2 708-226D0</li> <li>• KINAX 3W2 708-226E0</li> </ul>

Fig. 4: Contact devices


### 2.2.4 Special functions

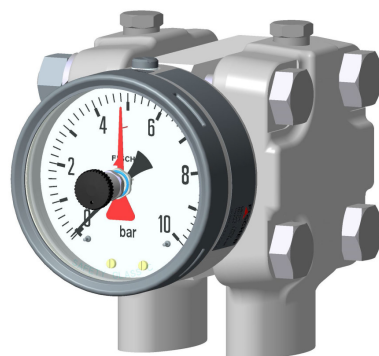


Fluid fillings	
<ul style="list-style-type: none"> <li>• Marker needle</li> <li>• Trailing needle</li> </ul>	<ul style="list-style-type: none"> <li>• Unit without contacts glycerine, silicon oil</li> </ul>

Fig. 5: Special functions


## 2.2.5 Assembly

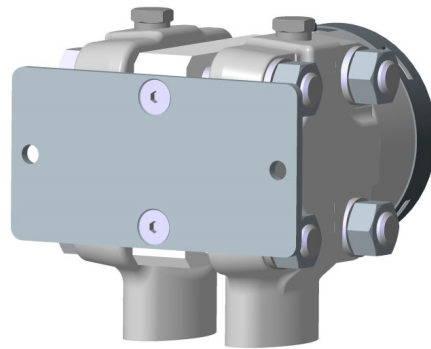

Wall mounting

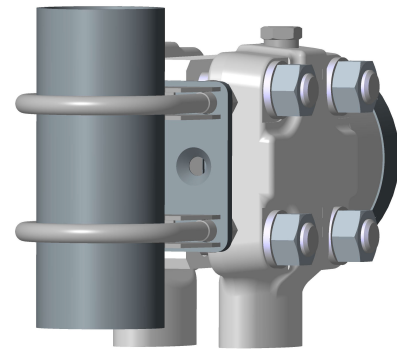

Pipe mounting

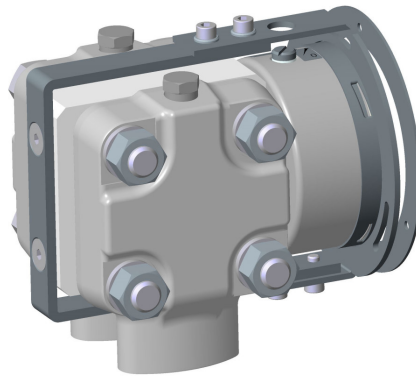

Panel mounting set type 1  
with panel mounting set



Panel mounting set type 2  
with front ring

Fig. 6: Assembly

The panel installation fittings can only be used in devices with a small measuring cell ( $\varnothing 75$ ) and a display in the NG100 bayonet ring casing.



### **⚠ WARNING**

#### **Panel mounting set**

Due to the heavy weight, the operator needs to install a support construction for installation of the front panel.

### 2.2.6 Equipment features (overview)

In the following, the equipment options of the DA01 are shown depending on the measuring cell used and the pressure stage.

**NOTICE! Only single contacts, no changeover contacts possible.**

#### Legend

- available
- on request

#### Small measuring cell Ø75

Measuring range	Measured value display Ø100	Low-action contacts			Snap-action contacts			Inductive contacts		Rotation angle transducer	Trailing needle	Marker needle	Remote seal	Pressure level
		1	2	3	1	2	3	1	2					
0 ... 0.6 bar	●	●			●			●		●	□	●	●	PN250/PN400
0 ... 1 bar	●	●			●			●		●	□	●	●	
0 ... 1.6 bar	●	●			●			●		●	□	●	●	
0 ... 2.5 bar	●	●			●			●		●	□	●	●	
0 ... 4.0 bar	●	●			●			●		●	□	●	●	
0 ... 6bar	●	●			●			●		●	□	●	●	
0 ... 10 bar	●	●			●			●		●	□	●	●	
0 ... 16 bar	●	●			●			●		●	□	●	●	
0 ... 25 bar	●	●			●			●		●	□	●	●	

Fig. 7: Small measuring cell Ø75 Measured value display Ø100

Measuring range	Measured value display Ø160	Low-action contacts			Snap-action contacts			Inductive contacts		Rotation angle transducer	Trailing needle	Marker needle	Remote seal	Pressure level
		1	2	3	1	2	3	1	2					
0 ... 0.6 bar	●	●			●			●		●	□	●	●	PN250/PN400
0 ... 1 bar	●	●			●			●		●	□	●	●	
0 ... 1.6 bar	●	●			●			●		●	□	●	●	
0 ... 2.5 bar	●	●			●			●		●	□	●	●	
0 ... 4.0 bar	●	●			●			●		●	□	●	●	
0 ... 6bar	●	●			●			●		●	□	●	●	
0 ... 10 bar	●	●			●			●		●	□	●	●	
0 ... 16 bar	●	●			●			●		●	□	●	●	
0 ... 25 bar	●	●			●			●		●	□	●	●	

Fig. 8: Small measuring cell Ø75 Measured value display Ø160

### Large measuring cell Ø130

Measuring range	Measured value display Ø100	Low-action contacts			Snap-action contacts			Inductive contacts		Rotation angle transducer	Trailing needle	Marker needle	Remote seal	Pressure level
		1	2	3	1	2	3	1	2					
0 ... 40 mbar	●											●		PN250
0 ... 60 mbar	●											●		
0 ... 100 mbar	●										□	●		
0 ... 160 mbar	●	□			□			●		●	□	●	●	
0 ... 250 mbar	●	□			□			●		●	□	●	●	
0 ... 400 mbar	●	□			□			●		●	□	●	●	

Fig. 9: Large measuring cell Ø130 Measured value display Ø100

Measuring range	Measured value display Ø160	Low-action contacts			Snap-action contacts			Inductive contacts		Rotation angle transducer	Trailing needle	Marker needle	Remote seal	Pressure level
		1	2	3	1	2	3	1	2					
0 ... 40 mbar	●											●		PN250
0 ... 60 mbar	●											●		
0 ... 100 mbar	●										□	●		
0 ... 160 mbar	●	□			□			●		●	□	●	●	
0 ... 250 mbar	●	□			□			●		●	□	●	●	
0 ... 400 mbar	●	□			□			●		●	□	●	●	

Fig. 10: Large measuring cell Ø130 Measured value display Ø160

## 2.3 Function diagram

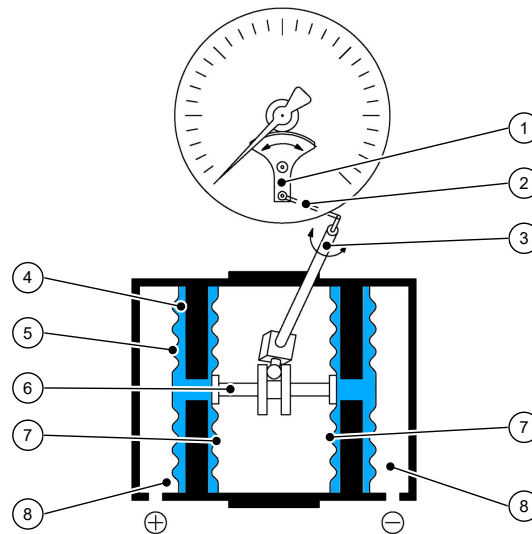


Fig. 11: Function diagram

1	Motion train	2	Transfer lever
3	Measuring shaft	4	Pressure transfer fluid
5	Separating membrane	6	Connecting rod
7	Measuring diaphragm	8	Pressure chamber

## 2.4 Design and mode of operation

The pressures in the pressure chambers that are to be compared are each exerted onto a measuring membrane that can be rigidly connected using a connection rod. To compensate the static pressure, the space between the separating and measuring membrane is filled with a pressure transfer fluid.

During pressure equalisation, the two measuring membranes are in an idle position. In case of pressure difference, the force acting on the membranes causes it to be moved towards the side of the lower pressure.

The connecting rod transfers the deflection of the measuring membranes onto the transfer lever mounted to the measuring shaft. Proportional to the current differential pressure, the measurement shaft makes a rotational movement that the indicator translates into a rotation angle between 0 and 270°.

In the case of one-sided pressure by the measuring system above and beyond the measuring range, the over-pressure guard will be activated which supports the overloaded membrane.

## 3 Assembly

### 3.1 General information

The device can be mounted in one of the following ways (see Assembly):

1. **Wall mounting**

The device is designed for installation onto flat assembly plates. The unit is equipped with a wall mounting plate for this mounting type.

2. **Pipe assembly**

The device is equipped with a special pipe assembly set and is suitable for mounting to a 2" pipe (DN50).

3. **Panel mounting**

Panel mounting is available in two installation models.

– **Panel mounting fittings** (Type 1)

This variant is only suitable for models with a small measuring system ( $\varnothing 75$ ) and a bayonet ring casing NG100.

– **Panel installation with front ring** (Type 2)

All models are suitable for this variant. A suitable steel construction must be used to ensure that the front plate can bear the weight of the DA01. This is possible e.g. by means of a combination with the wall or pipe assembly.

At the factory, the device is calibrated for vertical installation, but the installation position is arbitrary. For any installation positions that are not vertical, the zero-point signal can be corrected via the installed offset correction.

To ensure safety during installation and maintenance, we recommend installing a suitable shut-off valve on the system (see accessories).

### 3.2 Process connection

- By authorized and qualified specialized personnel only.
- The pipes need to be depressurized when the instrument is being connected.
- Appropriate steps must be taken to protect the device from pressure surges.
- Check that the device is suitable for the medium being measured.
- Maximum pressures must be observed (cf. Tech. data)

All supply lines are arranged so that there are no mechanical forces acting on the device.

The pressure lines must be kept as short as possible and installed without any tight bends to avoid delays.

The pressure lines must be installed at an inclination so that when fluids are measured no air pockets are created or when measuring gases, no water pockets are created. If the required inclination is not reached, water or air filters must be installed at suitable places.

The pressure lines need to be vented for fluid measuring media. [► 15].

If water is used as a measuring medium, the unit must be protected against frost.

If the pressure sensing lines are already pressurised at the time of commissioning, zero-point control and adjustment cannot be performed. In such cases, the device should be only connected to the mains without the pressure sensing lines.



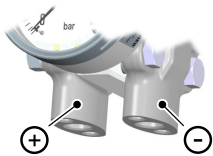


Fig. 12: Process connection

The process connections are marked on the unit with (+) and (-) symbols. The pressure lines are to be mounted according to this marking.

**Differential pressure**

- ⊕ Higher pressure
- ⊖ lower pressure

**3.3 Electrical connections**

- By authorized and qualified specialized personnel only.
- When connecting the unit, the national and international electro-technical regulations must be observed.
- Disconnect the system from the mains, before electrically connecting the device.
- Install the consumer-adapted fuses.
- Do not connect the connector if strained.

Only devices with contact elements are connected to the electrical supply. To this end there is a cable socket on the side of the device, or a HAN plug in the power plant version.

**3.3.1 Cable socket / HAN plug**

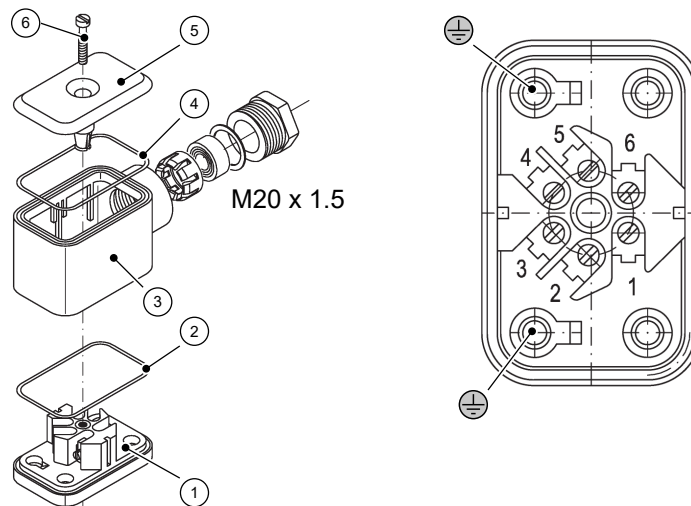


Fig. 13: Cable socket

1	Lower part	2	Sealing ring EPDM
3	Middle part	4	Sealing ring EPDM
5	Lid	6	Lid screw

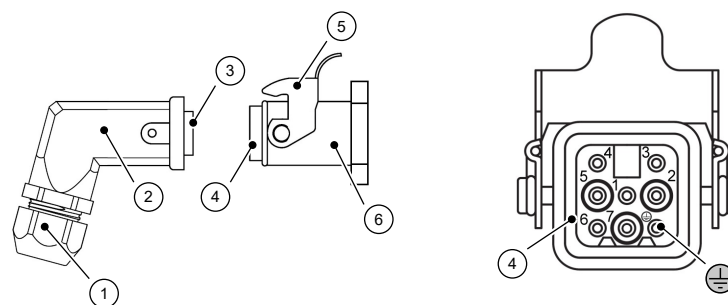


Fig. 14: HAN connector

1	Cable screw connection M20 x 1.5	2	Sleeve housing Han 3A
3	Socket insert Han 7D	4	Pin insert Han 7D
5	Safety clip	6	Attachment casing Han 3D

### 3.3.2 Contact elements

Contact devices are supplied according to data sheet KE . There you will find a representation of all variants, their pin assignment and the technical data.

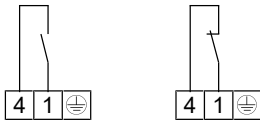


Fig. 15: Low action and magnetic spring contact

#### Low action and magnetic spring contact

The terminal numbers always correspond to the number of the contact. A maximum of 1 contact can be used. The contact can be a normally open or normally closed contact.

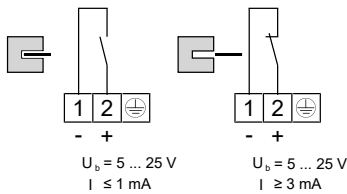


Fig. 16: Inductive contact

#### Inductive contacts

With inductive contacts, the switching function is influenced not only by the proximity switch but also by the switching amplifier used. A maximum of 1 contact can be used. The contact can be designed as a normally open or normally closed contact.

### 3.3.3 Rotation angle transducers KINAX 3W2

The rotation angle encoder serves to record angular positions, to prepare and provide the measured values as electrical output signals 0/4 ... 20 mA for the following device. Rotation angle encoder is supplied in accordance with data sheet KE09. This contains further information about the pin assignment and the technical data.

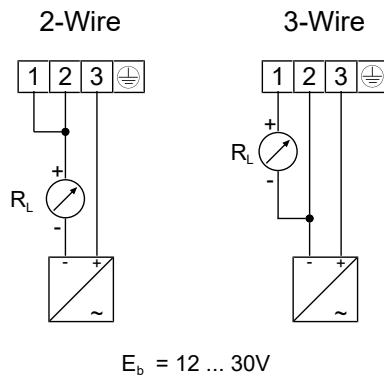


Fig. 17: Rotation angle transducers connection

## 4 Commissioning

### 4.1 General

All electrical supply, operating and measuring lines, and the pressure connections must have been correctly installed before commissioning. All supply lines are arranged so that there are no mechanical forces acting on the device.

Check that all pressure connections are free of leaks before commissioning.

In models filled with fluid, the venting valve on the upper side of the bayonet casing must be opened before commissioning! To do this, turn the venting screw anticlockwise as far as it will go.

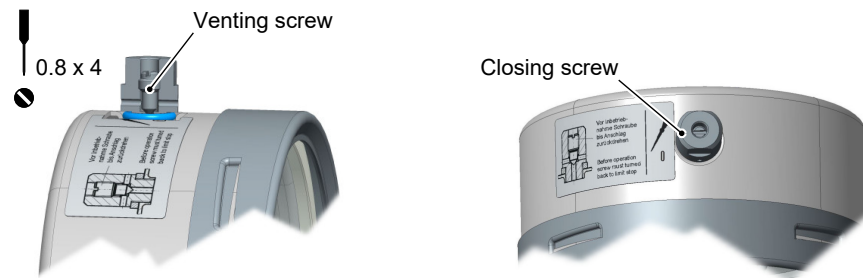


Fig. 18: Venting valve

### 4.2 Venting of the pressure lines



#### **WARNING**

##### **Risk connected to pressure**

Never remove the venting screw if the unit is still pressurised! Close the shut-off valves of the flanged fittings or depressurize the system.

The pressure lines need to be vented for before commissioning on devices that work with fluid media. Proceed as follows:

- Remove the venting screws of the two pressure chambers.
- Carefully increase the system pressure until the fluid level is 5 mm below the sealing surface of the threaded borehole.
- Close the device with the venting screws

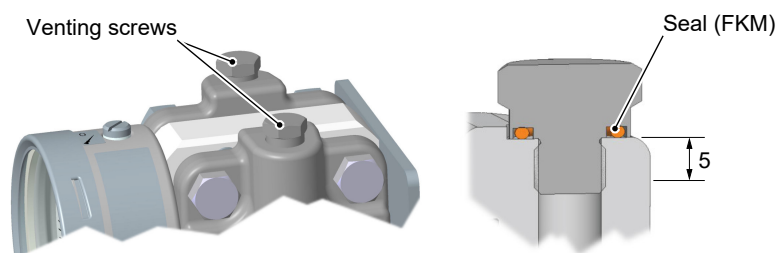


Fig. 19: Venting with fluid media

### 4.3 Zero point correction

The differential pressure measuring units are set in the factory before delivery so that they do not usually need to be adjusted at the assembly site. If this is still necessary, proceed as follows:

- Depressurize the measuring chamber (+) and (-) side or only exert the existing static system pressure.
- Remove the closing screw The zero point correction screw is located behind.
- Set the measurement value pointer to the scale zero point using the zero point correction screw.
- Mount the closing screw

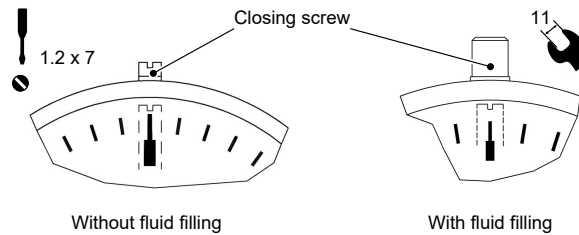


Fig. 20: Zero point correction screw

### 4.4 Switch point setting

There is an adjustment lock attached to the front pane of the measuring unit on units with contact elements. This means that the contacts attached to the target indicators can be set to any point along the scale.

To facilitate switching precision and the service life of the mechanical measuring system, the switching points should lie between 10% and 90% of the measuring range.

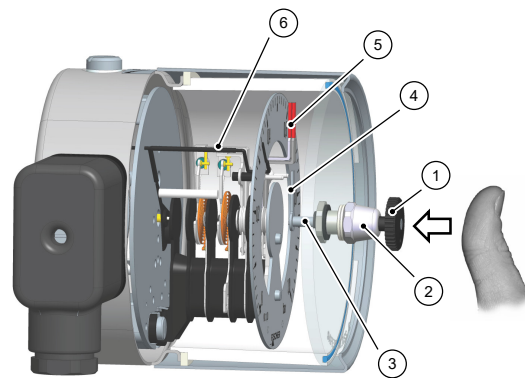


Fig. 21: Switch point setting

1	Adjustment key	2	Adjusting lock
3	Axle	4	Drive arm
5	Set-point display	6	Actual value display

#### Adjustment sequence:

- Press the axle inwards until the drive arm reaches behind the setting pin of the target value indicator.
- Set the target value indicator to the required switch point by turning the setting key.
- Relieve the axle.
- The switch-point setting can be secured against unintentional adjustment by removing the attachment screw and the adjustment key.

## 5 Servicing

### 5.1 Maintenance

The instrument is maintenance-free. We recommend the following regular inspection to guarantee reliable operation and a long service life:

- Check the function in combination with downstream components.
- Check the leak-tightness of the pressure connection lines.
- Check the electrical connections.

The exact test cycles need to be adapted to the operating and environmental conditions. In combination with other devices, the operating instructions for the other devices also need to be observed.

### 5.2 Transport

The measuring device must be protected against impacts. It should be transported in the original packaging or a suitable transport container.

### 5.3 Service

All defective or faulty devices should be sent directly to our repair department. Please coordinate all shipments with our sales department.



#### **WARNING**

##### **Process media residues**

Process media residues in and on dismantled devices can be a hazard to people, animals and the environment. Take adequate preventive measures. If required, the devices must be cleaned thoroughly.

Return the device in the original packaging or a suitable transport container.

### 5.4 Disposal

Please help to protect the environment by always disposing of the work pieces and packaging materials in compliance with the valid national waste and recycling guidelines or reuse them.

## 6 Technical Data

### 6.1 Allgemeines

EXECUTION	Nominal pressure	Measuring cell	Application information
DA01 V ...	PN250	Ø75	<p>Measuring ranges: 0...0.6 bar to 0...25 bar</p> <p>Remote seals: It is possible to attach remote seals for all measuring ranges. The remote seals need to be designed for the displacement volume, the length of the cable and the application temperature.</p>
DA01 U ...	PN400	Ø75	<p>Measuring ranges: 0...0.6 bar to 0...25 bar</p> <p>Remote seals: It is possible to attach remote seals for all measuring ranges. The remote seals need to be designed for the displacement volume, the length of the cable and the application temperature.</p>
DA01 W ...	PN250	Ø130	<p>Measuring ranges: 0...40 mbar to 0...400 bar</p> <p>Limitations: Drag indicator measuring ranges <math>\geq 60</math> mbar Contacts / Transmitter measuring ranges <math>\geq 100</math> mbar</p> <p>Remote seals: It is possible to attach remote seals for measuring ranges <math>\geq 160</math> mbar. The remote seals need to be designed for the displacement volume, the length of the cable and the application temperature.</p>

## 6.2 Input variables

### Measuring variable

Differential pressure in gaseous and fluid aggressive media.

### General

Rated pressure of the measuring system	Max. static operating pressure
Durability	One-sided over-pressure-proof up to the rated pressure of the measuring system resistance to under-pressure on the (+) and (-) side
Measurement accuracy	±1.6 % of the measuring range (without contacts)
Temperature sensor	0.3 % / 10 °C
Zero-point adjustment	±25 % of the measuring range

### Measuring ranges

#### Small measuring cell Ø75

Measuring range	Device model		
	V	U	W
0 ... 0.6 bar	•	•	
0 ... 1 bar	•	•	
0 ... 1.6 bar	•	•	
0 ... 2.5bar	•	•	
0 ... 4.0 bar	•	•	
0 ... 6 bar	•	•	
0 ... 10 bar	•	•	
0 ... 16 bar	•	•	
0 ... 25 bar	•	•	

#### Large measuring cell Ø130

Measuring range	Device model		
	V	U	W
0 ... 40 mbar			•
0 ... 60 mbar			•
0 ... 100 mbar			•
0 ... 160 mbar			•
0 ... 250 mbar			•
0 ... 400 mbar			•

### 6.3 Operating conditions

Permissible ambient temperature	-20 ... +60 °C
Admissible storage temperature	-40 ... +80 °C
Admissible media temperature	< 85 °C
Type of protection:	IP 65 acc. to EN 60529

### 6.4 Construction design

#### Materials

Measured value display	Material	Material no.	
		EU	AISI
Bayonet ring housing NG100, NG160	CrNi steel	1.4301	304
Process connection (all models)	CrNi steel	1.4404	316L
Intermediate plate	AlMgSiPb	HARD-COAT®	
Seals (O-rings)	FKM		
Motion train	CrNi steel		
Dial face and needle	Aluminium, painted, printed		
Inspection disk	Safety laminated glass		

MB = Measurement range

#### Materials (media-contacting)

Design of the measuring system (R)	Material	Material no.	
		EU	AISI
Pressure caps	CrNi steel	1.4404	316L
Separation membranes	CrNi steel	1.4571	361Ti
Design of the measuring system (G)	Material	Material no.	
		EU	AISI
Pressure caps	CrNi steel	1.4404	316L
Separation membranes	Hastelloy® C276		
Process connection	Material	Material no.	
		EU	AISI
Connecting piece and port	CrNi steel	1.4404	316L
Cutting ring screw connections	CrNi steel	1.4571	

#### Assembly

Wall mounting	Flanged assembly plate
Pipe mounting	Flanged assembly plate and attachment bracket
Panel mounting set type 1	Panel installation fittings for units with a small measuring cell (Ø75) and NG100 bayonet ring casing.
Panel mounting set type 2	Front ring and support construction



## 6.4.1 Additional Attachments

### 6.4.1.1 Contact elements

Limit signal transmitters (contacts) and capacitive rotation angle transducers with an output signal proportional to the angular position can be fitted into a housing augmented by a corresponding bayonet ring connector.

A certain minimum pressure level is required to operate this kind of contact element, which is why there is a lower limit for the mbar measuring ranges. This limit depends on the model type and is stated in the section 'General'.

**CAUTION! By driving and switching the contacts, the measuring deviation increases to a total of  $\pm 2.5\%$  of the measuring range.**

For more information and the order key, please refer to the data sheet:

- for limit switch in data sheet KE
- for rotation angle converter in the data sheet KE09

### 6.4.1.2 Liquid filling

#### **NOTICE! Only devices without contact element**

Under difficult operating conditions such as vibrations, extreme pressure fluctuations or to prevent condensation in open-air installations, the housing can be filled with the following liquids:

- Glycerine
- Silicon oil

### 6.4.1.3 Marker needle

A settable red marker can be attached to the scale to clearly show a certain pressure (limit value).

### 6.4.1.4 Trailing needle

The trailing needle is 'dragged' with the measured value indicator. As there is no fixed connection between the two needles, one-off maximum values are stored. The trailing needle can be reset using an adjusting dial in the window. Trailing needles cannot be used in conjunction with contacts. A certain minimum pressure level is required to move the drag indicator, which is why there is a lower limit for the mbar measuring ranges. This limit depends on the model type and is stated in the section 'General'.

### 6.4.1.5 Shut-off fitting

3-spindle valve block PN 100, DN 5, can be directly flanged

- Type DZ3600SV2700
- Material 1.4571
- Functions: Shut-off, pressure compensation

### 6.4.2 Electrical connection

In the case of devices with additional electronic equipment, the connection is realised using a cable socket attached to the side and/or with a Han 7D connector on the power plant models. The pin assignment depends on the ordered mode and is stated in the data sheet KE or KE09.

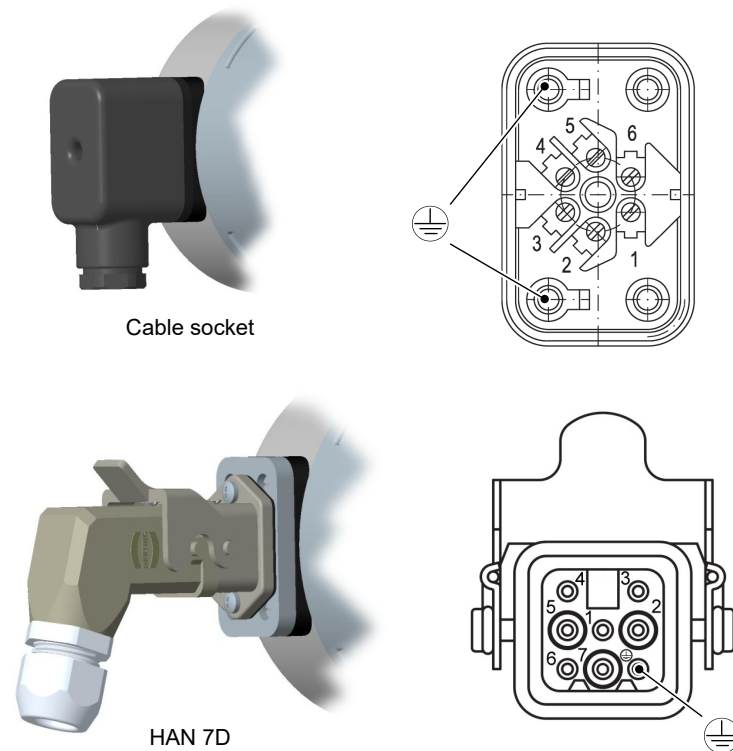


Fig. 22: Cable socket

#### Cable socket

Number of screw terminals	6 + 2PE
Rated current	See data sheet KE
Rated voltage	250 V
Cable diameter	up to 1.5 mm <sup>2</sup> with wire protection
Cable screw connection	M20 x 1.5, terminal range 7 ... 13 mm


#### HAN 7D

No. of crimp contacts	7 + PE
Rated current	See data sheet KE
Rated voltage	50 V
Cable diameter	1 mm <sup>2</sup>
Cable screw connection	M20 x 1.5, terminal range 7 ... 13 mm


### 6.4.3 Dimensional drawings

All dimensions in mm unless otherwise stated

#### Small measuring system (Ø75)

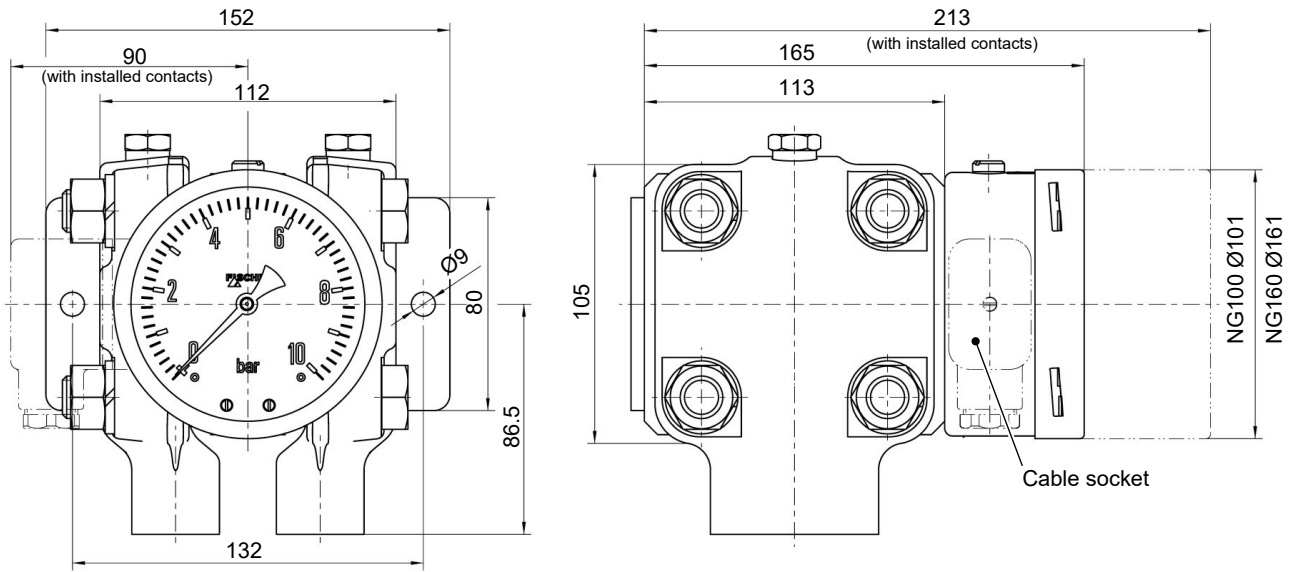

#### Flange based on DIN EN 61518

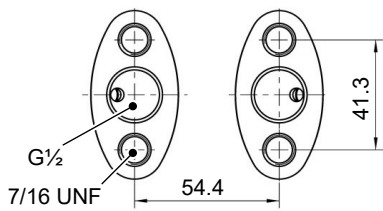

#### Wall mounting plate

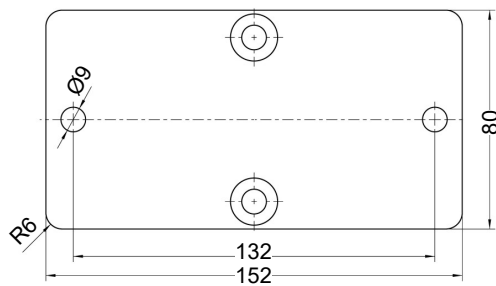


Fig. 23: Dimensional drawing (Small measuring system Ø75)

#### 2" pipe mounting (possible for all models)



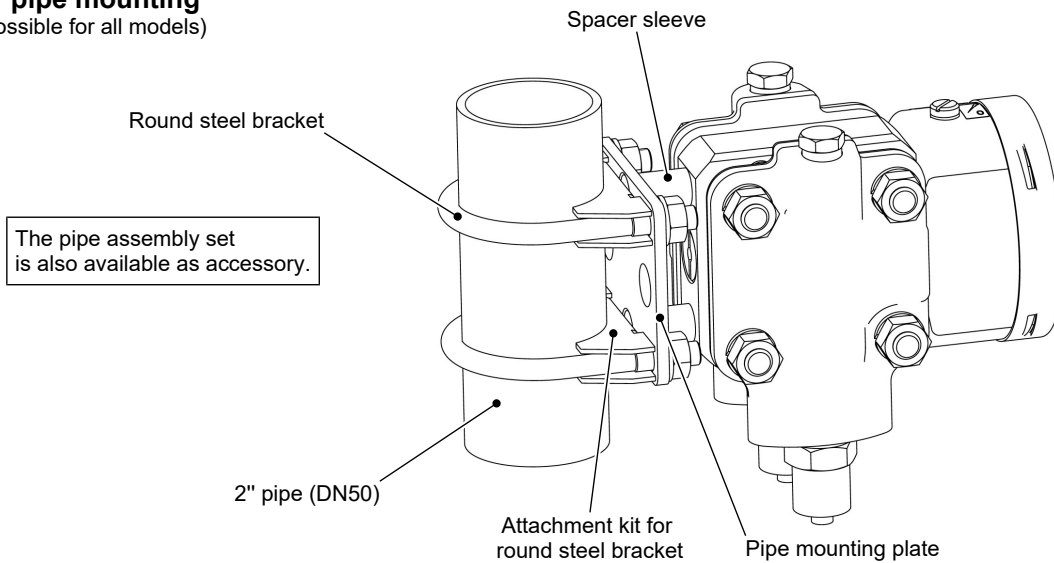


Fig. 24: Pipe mounting

**Large measuring system (Ø130)**

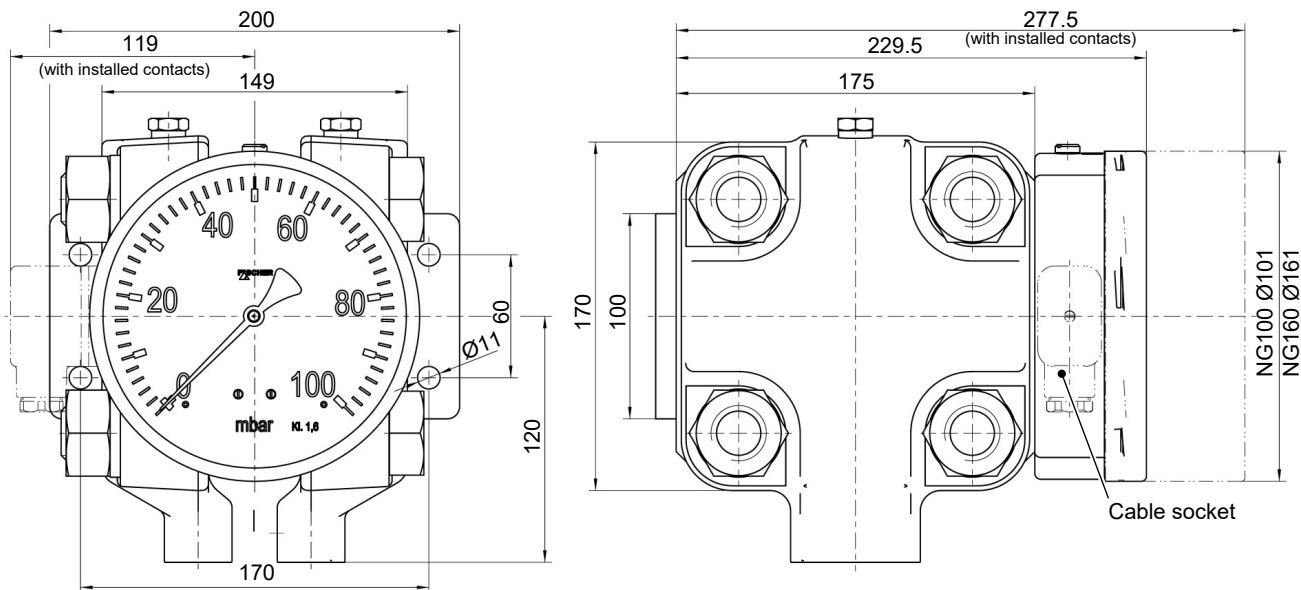

**Flange based on DIN EN 61518**

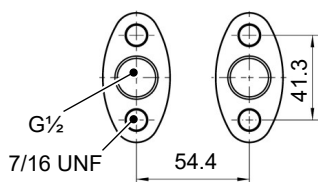

**Wall mounting plate**



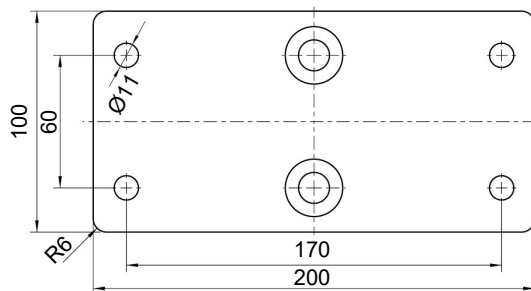


Fig. 25: Dimensional drawing (Large measuring system Ø130)

**Installation of front panel type 1**

(only small measuring system Ø75 and NG100 display)

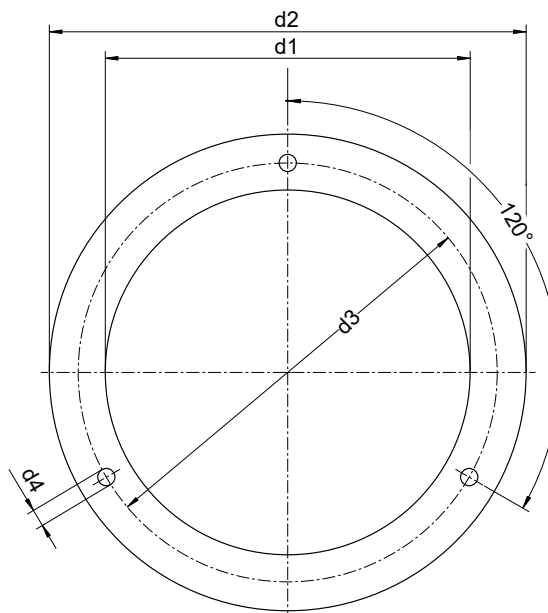
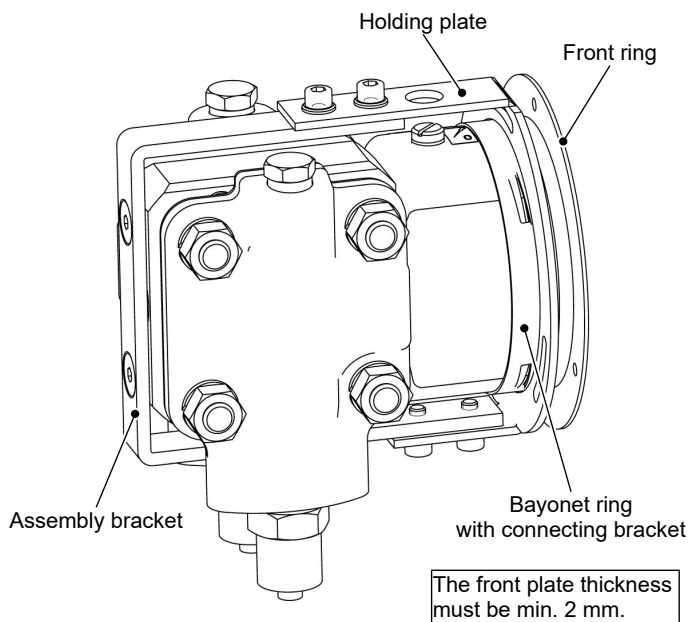


	d1	d2	d3	d4
<b>NG100</b>	101	132	116	4.8

Fig. 26: Installation of front panel with panel fittings

### Installation of front panel type 2


The front plate thickness must be min. 2 mm.

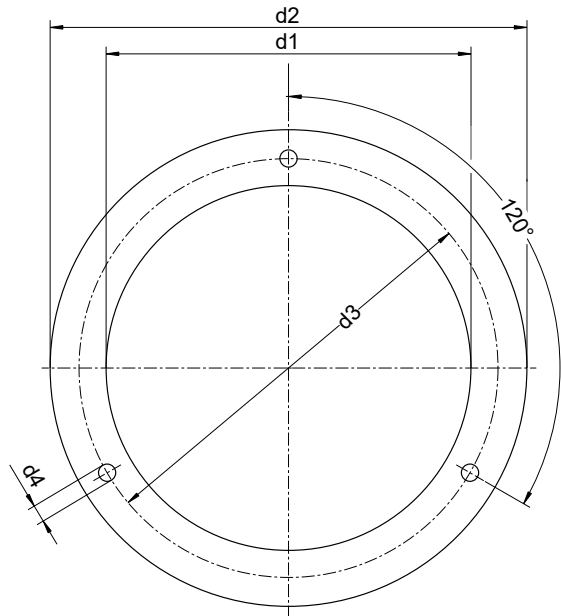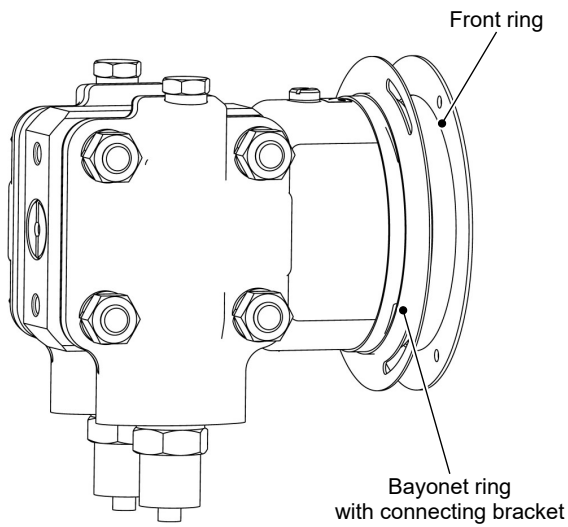


	d1	d2	d3	d4
<b>NG100</b>	101	132	116	4.8
<b>NG160</b>	161	196	178	5.8

A suitable steel construction must be used to ensure that the front plate can bear the weight of the device.

Examples:

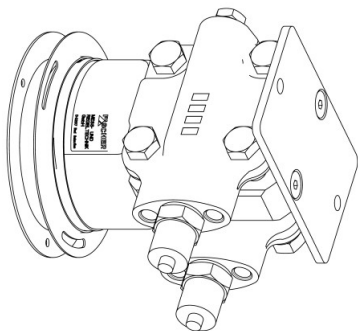

Assembly on a mounting plate

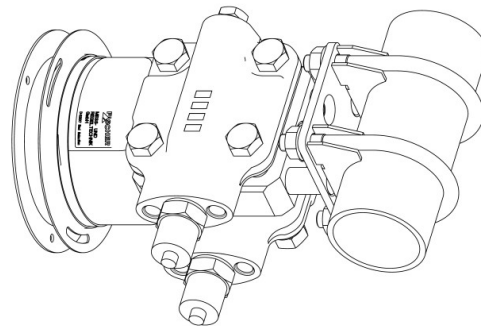

Mounting to a 2" pipe

Fig. 27: Installation of front panel with front ring

**Contact elements**

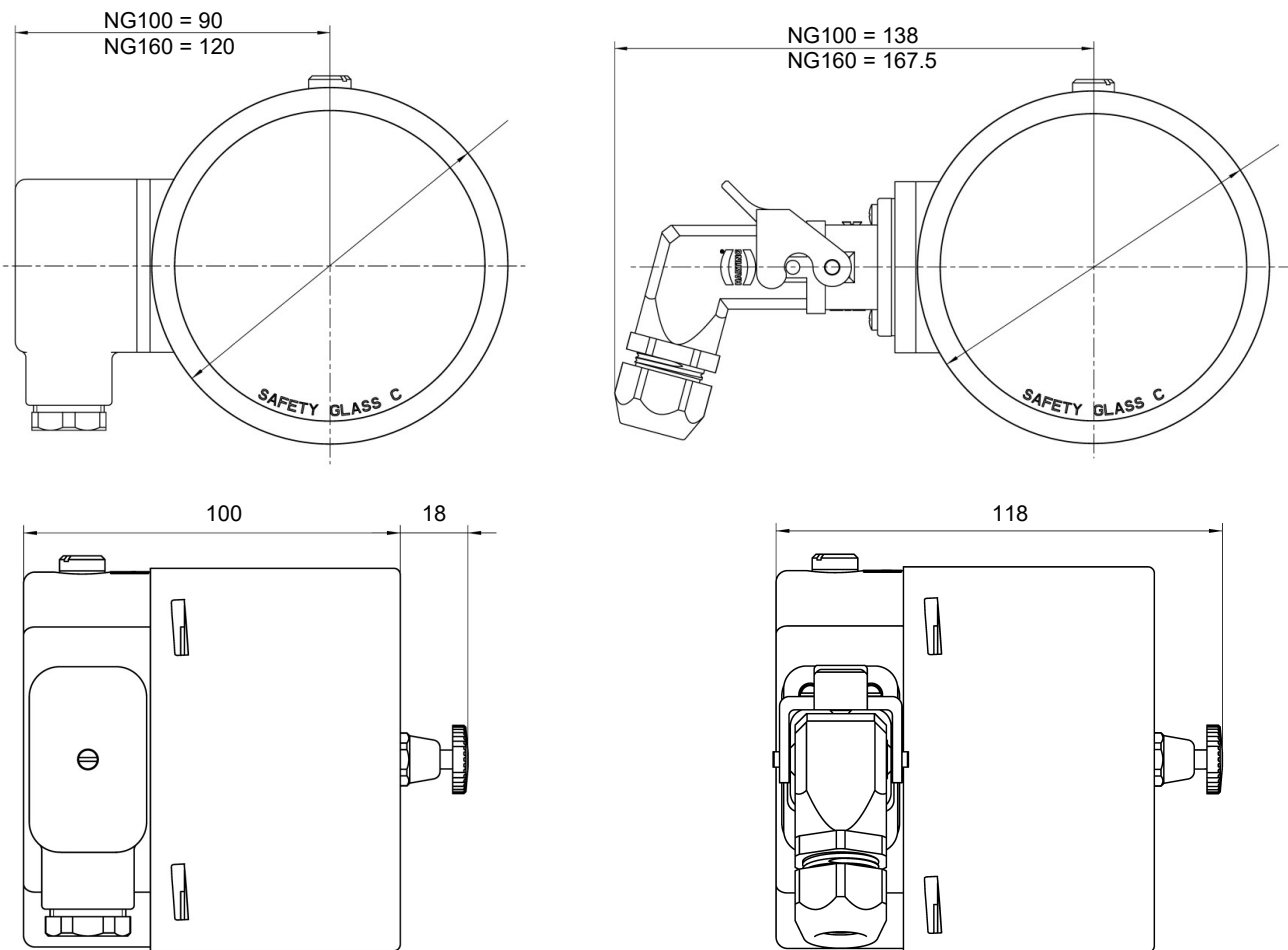


Fig. 28: Dimensional drawing contact devices

**Shut-off fitting**  
with inner spindle thread


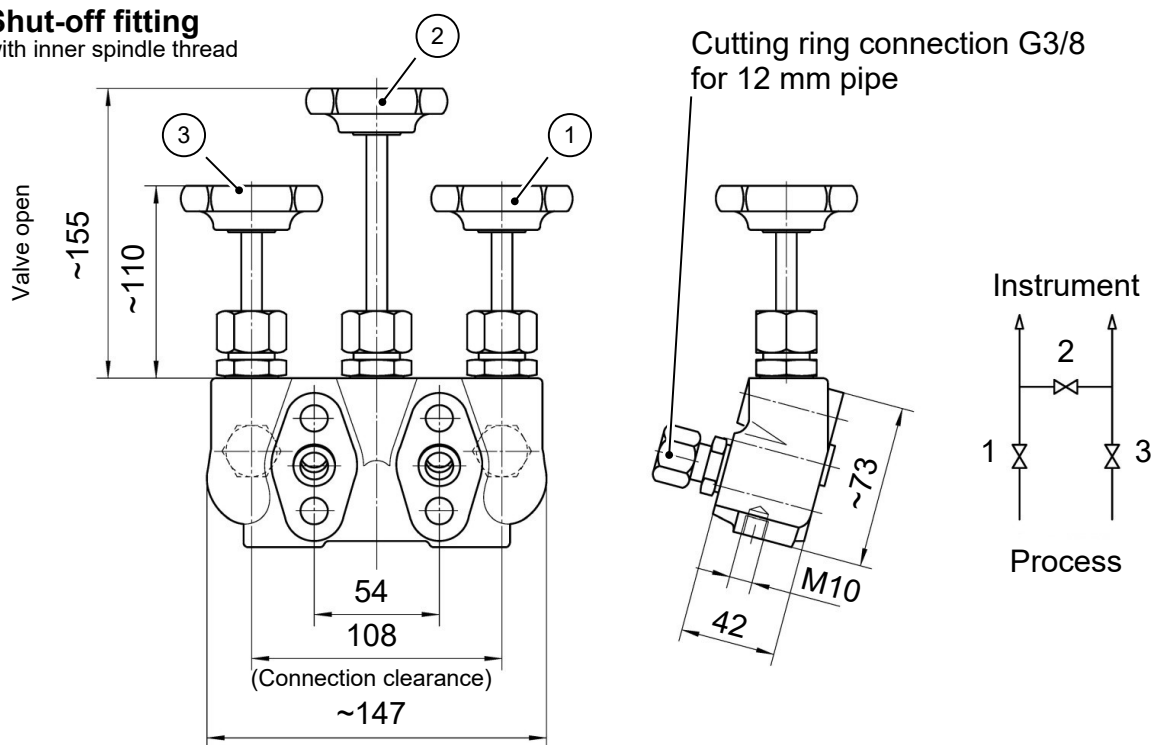


Fig. 29: Shutoff valve DZ3600SV2700

## 7 Order Codes

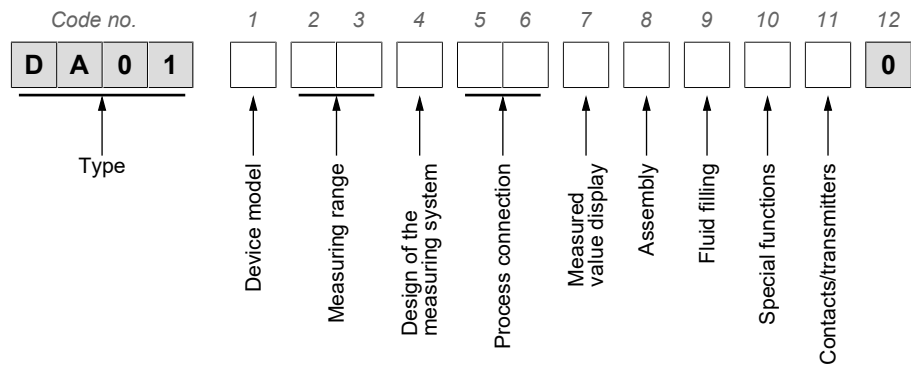

### Device model:

[1]	Pressure level	Measuring cell
V	PN250	Ø75
U	PN400	Ø75
W	PN250	Ø130

### Measuring range:

Small measuring system  
Ø75

[2.3]	Measuring range	Device model		
		V	U	W
01	0 ... 0.6 bar	•	•	
02	0 ... 1 bar	•	•	
03	0 ... 1.6 bar	•	•	
04	0 ... 2.5bar	•	•	
05	0 ... 4.0 bar	•	•	
06	0 ... 6 bar	•	•	
07	0 ... 10 bar	•	•	
08	0 ... 16 bar	•	•	
09	0 ... 25 bar	•	•	
99	Special measuring ranges	•	•	

Large measuring system  
Ø130

[2.3]	Measuring range	Device model		
		V	U	W
57	0 ... 40 mbar			•
58	0 ... 60 mbar			•
59	0 ... 100 mbar			•
60	0 ... 160 mbar			•
82	0 ... 250 mbar			•
83	0 ... 400 mbar			•
99	Special measuring ranges			•

**Design of the measuring system:**

<b>[4]</b>	
<b>R</b>	Pressure chamber CrNi steel 1.4404 (AISI 316L) Measuring membrane standard
<b>G</b>	Pressure chamber CrNi steel 1.4404 (AISI 316L) Measuring membrane Hastelloy C276

**Process connection:**

<b>[5.6]</b>	
<b>03</b>	Flange connection based on DIN EN 61518 with internal thread G $\frac{1}{2}$
<b>04</b>	Connecting piece G $\frac{1}{2}$ with inside thread 1/4 -18 NPT
<b>05</b>	Connecting piece G $\frac{1}{2}$ with inside thread 1/2 -14 NPT
<b>13</b>	Connection shanks G $\frac{1}{2}$ with external thread G $\frac{1}{2}$
<b>14</b>	Connecting port G $\frac{1}{2}$ with outer thread 1/4-18 NPT
<b>15</b>	Connecting port G $\frac{1}{2}$ with outer thread 1/2-14 NPT
<b>27</b>	Cutting ring connection in brass for 12 mm pipe

**Measured value display:**

<b>[7]</b>	
<b>L</b>	Bayonet ring housing NG100
<b>M</b>	Bayonet ring housing NG160

**Assembly:**

<b>[8]</b>	
<b>W</b>	Wall mounting
<b>R</b>	Pipe mounting
<b>T</b>	Panel installation fittings (only a small measuring system $\varnothing 75$ , NG100 measured value display without contact elements)
<b>G</b>	Front ring for panel mounting

**Fluid filling:**

<b>[9] Only devices without contact element</b>	
<b>0</b>	Without fluid filling
<b>1</b>	Glycerine
<b>4</b>	Paraffin oil
<b>5</b>	Silicon oil

**Special functions:**

<b>[10]</b>	
<b>0</b>	Without special function
<b>1</b>	Adjustable marker needle
<b>2</b>	Resettable drag needle



**Contacts/transmitters:**

[11]	
0	No contacts/transmitters
1	Built-in contacts as per data sheet KE
2	Installed capacitive rotation angle encoder in accordance with data sheet KE09
5	Built-in contacts with plug connector (power plant model)

**Limitations**

A minimum operating pressure, which not all measuring ranges achieve, is required to activate a contact element or a drag indicator. Please also note the information about the equipment features [► 9].

**7.1 Accessories**

Order no.	Planned measures	Material
<b>DZ3600SV2700</b>	Triple valve block DN5 PN420 <ul style="list-style-type: none"> <li>• Flange connection acc. to DIN EN 61518</li> <li>• Cutting ring screw connections 12 mm pipe</li> <li>• Including assembly set</li> </ul>	1.4571

Order no.	Planned measures	Type
<b>05003065</b>	Isolating unit amplifier 1-channel 24 V DC	TS500Ex-ia-1R-5
<b>05003066</b>	Isolating unit amplifier 2-channel 24 V DC	TS500Ex-ia-2R-5
<b>05003083</b>	Isolating unit amplifier 1-channel 230 V AC	TS500Ex-ia-1R-0
<b>05003084</b>	Isolating unit amplifier 2-channel 230 V AC	TS500Ex-ia-2R-0
<b>05003070</b>	Universal supplier isolator	ST500Ex-10-5
<b>05003086</b>	Universal supplier isolator	ST500Ex-10-0

## 8 EU Declarations of conformity



(Translation)

### EU Declaration of Conformity

For the product described as follows

**Product designation**                    **Differential Pressure Gauge**  
(with contact device KE ## S/M ##### H2)

**Type designation**                    **DA01 ... 10**  
**DA01 ... 50**

it is hereby declared that it corresponds with the basic requirements specified in the following designated directives:

2014/35/EU	<i>Low Voltage Directive</i>
2011/65/EU	<i>RoHS Directive</i>
(EU) 2015/863	<i>Delegated Directive amending Annex II to Directive 2011/65/EU</i>

The products were tested in compliance with the following standards.

	<b>Low Voltage Directive (LVD)</b>
<i>DIN EN 61010-1:2020-03</i>	<i>Safety requirements for electrical equipment for measurement, control, and laboratory use -</i>
<i>EN 61010-1:2010 + A1:2019 + A1:2019/</i>	<i>Part 1: General requirements</i>
<i>AC:2019</i>	

	<b>RoHS Directive (RoHS 3)</b>
<i>DIN EN IEC 63000:2019-05</i>	<i>Technical documentation for the assessment of electrical and electronic products with re-</i>
<i>EN IEC 63000:2018</i>	<i>spect to the restriction of hazardous substances</i>

Also they were subjected to the conformity assessment procedure „Internal production control“.

Sole responsibility for the issue of this declaration of conformity in relation to fulfilment of the fundamental requirements and the production of the technical documents is with the manufacturer.

**Manufacturer**                                **FISCHER Mess- und Regeltechnik GmbH**  
Bielefelder Str. 37a  
32107 Bad Salzuffen, Germany  
Tel. +49 (0)5222 974 0

**Documentation representative**        Torsten Malischewski  
General Manager R&D

The devices bear the following marking:



Bad Salzuffen  
09 June 2021

G. Gödde  
Managing director





(Translation)

## EU Declaration of Conformity

For the product described as follows

**Product designation** **Differential Pressure Gauge**  
(with transmitter for angular position KE0905#9)

**Type designation** **DA01 ... 20**

it is hereby declared that it corresponds with the basic requirements specified in the following designated directives:

2014/30/EU

EMC Directive

2011/65/EU

RoHS Directive

(EU) 2015/863

Delegated Directive amending Annex II to Directive 2011/65/EU

The products were tested in compliance with the following standards.

### Electromagnetic compatibility (EMC)

DIN EN IEC 61000-6-2:2019-11  
EN IEC 61000-6-2:2019

Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity standard for industrial environments

DIN EN 61000-6-3:2011-09  
EN 61000-6-3:2007 + A1:2011

Electromagnetic compatibility (EMC) - Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environments

DIN EN 61000-6-3 Corrigendum 1:2012-11

Corrigendum to DIN EN 61000-6-3

### RoHS Directive (RoHS 3)

DIN EN IEC 63000:2019-05  
EN IEC 63000:2018

Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

Also they were subjected to the conformity assessment procedure „Internal production control“.

Sole responsibility for the issue of this declaration of conformity in relation to fulfilment of the fundamental requirements and the production of the technical documents is with the manufacturer.

**Manufacturer** **FISCHER Mess- und Regeltechnik GmbH**  
Bielefelder Str. 37a  
32107 Bad Salzuflen, Germany  
Tel. +49 (0)5222 974 0

**Documentation representative** Torsten Malischewski  
General Manager R&D

The devices bear the following marking:



Bad Salzuflen  
09 June 2021

G. Gödde  
Managing director

09010304 • CE\_EN\_DA01\_20 • Rev. ST4-B • 06/21

1 / 1



Fig. 31: CE\_EN\_DA01\_20

## 9 UKCA Declarations of Conformity



### UKCA Declaration of Conformity

For the product described as follows

<b>Product designation</b>	<b>Differential Pressure Gauge</b> (with contact device KE ## S/M ##### H2)
<b>Type designation</b>	<b>DA01 ... 10</b> <b>DA01 ... 50</b>

is hereby declared to comply with the essential requirements, specified in the following UK regulations:

<i>Statutory regulation No.</i>	<i>Description</i>
2016 No. 1101	<i>The Electrical Equipment (Safety) Regulations 2016</i>
2022 No. 1647	<i>The Hazardous Substances and Packaging (Legislative Functions and Amendment) (EU Exit) Regulations 2020</i>
2021 No. 422	<i>The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (Amendment) Regulations 2021</i>

The products have been tested according to the following standards.

#### Low Voltage Directive (LVD):

<i>BS EN 61010-1+A1:2017-03-31</i>	<i>Safety requirements for electrical equipment for measurement, control, and laboratory use. General requirements</i>
------------------------------------	--

#### Restriction of Hazardous Substances (RoHS):

<i>BS EN IEC 63000:2018-12-10</i>	<i>Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances</i>
-----------------------------------	---

The sole responsibility for drawing up this declaration of conformity in relation to the fulfilment of the essential requirements and the preparation of the technical documentation lies with the manufacturer.

<b>Manufacturer</b>	<b>FISCHER Mess- und Regeltechnik GmbH</b> Bielefelder Str. 37a 32107 Bad Salzufflen, Germany Tel. +49 (0)5222 974 0
---------------------	---


The devices bear the following marking:



Bad Salzufflen  
04 Okt 2021

G. Gödde  
Managing director





## UKCA Declaration of Conformity

For the product described as follows

Product designation	<b>Differential Pressure Gauge (with transmitter for angular position KE0905#9)</b>
Type designation	<b>DA01 ... 20</b>

is hereby declared to comply with the essential requirements, specified in the following UK regulations:

<b>Statutory regulation No.</b>	<b>Description</b>
2016 No. 1091	<i>The Electromagnetic Compatibility Regulations 2016</i>
2022 No. 1647	<i>The Hazardous Substances and Packaging (Legislative Functions and Amendment) (EU Exit) Regulations 2020</i>
2021 No. 422	<i>The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (Amendment) Regulations 2021</i>

The products have been tested according to the following standards.

### Electromagnetic compatibility (EMC):

<i>BS EN IEC 61000-6-2:2019-02-25</i>	<i>Electromagnetic compatibility (EMC). Generic standards. Immunity standard for industrial environments</i>
<i>BS EN IEC 61000-6-3:2021-03-30</i>	<i>Electromagnetic compatibility (EMC). Generic standards. Emission standard for equipment in residential environments</i>

### Restriction of Hazardous Substances (RoHS):

<i>BS EN IEC 63000:2018-12-10</i>	<i>Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances</i>
-----------------------------------	---

The sole responsibility for drawing up this declaration of conformity in relation to the fulfilment of the essential requirements and the preparation of the technical documentation lies with the manufacturer.

<b>Manufacturer</b>	<b>FISCHER Mess- und Regeltechnik GmbH</b>
	Bielefelder Str. 37a
	32107 Bad Salzufflen, Germany
	Tel. +49 (0)5222 974 0

The devices bear the following marking:



Bad Salzufflen  
04 Okt 2021

G. Gödde  
Managing director





## 10 EAC Declaration



### ЕВРАЗИЙСКИЙ ЭКОНОМИЧЕСКИЙ СОЮЗ ДЕКЛАРАЦИЯ О СООТВЕТСТВИИ

**Заявитель** Общество с ограниченной ответственностью «МАТИС-М». Место нахождения: 117261, город Москва, улица Вавилова, дом 70, корпус 3, комната правления, Российская Федерация. Адрес места осуществления деятельности: 109029, город Москва, город, Сибирский проезд, дом 2, корпус 12, Российская Федерация, Основной государственный регистрационный номер: 1037739575125, телефон: +7 495 725-23-09, адрес электронной почты: info@matis-m.ru

**в лице** Генерального директора Шарова Александра Анатольевича

**заявляет, что** Прибор - манометр для измерения дифференциального давления, тип DA01, DA03, DA08, DA09, DA10, DA12

Продукция изготовлена в соответствии с директивой 2014/30/EU

**Изготовитель** "FISCHER Mess- und Regeltechnik GmbH"

Место нахождения: Bielefelder StraBe 37a, D-32107 Bad Salzuflen, Германия. Филиал завода-изготовителя: "FISCHER Mess- und Regeltechnik GmbH" место нахождения: Bielefelder StraBe 37a, D-32107 Bad Salzuflen, Германия.

Код ТН ВЭД ЕАЭС 9026 20 400 0, серийный выпуск

**Соответствует требованиям** Технического регламента Таможенного союза ТР ТС 020/2011 "Электромагнитная совместимость технических средств"



**Декларация о соответствии принята на основании** протокола № 01228-02/2017-06 от 14.06.2017 года. Испытательной лаборатории (центра) продукции народного потребления "Отдел 101" Общества с ограниченной ответственностью "Межрегиональный центр исследований и испытаний", регистрационный номер аттестата аккредитации № RA.RU.21AO47 Схема декларирования: 3д

**Дополнительная информация** ГОСТ 30804.3.2-2013 Совместимость технических средств электромагнитная. Эмиссия гармонических составляющих тока техническими средствами с потребляемым током не более 16 А (в одной фазе). Нормы и методы испытаний

ГОСТ 30804.3.3-2013 Совместимость технических средств электромагнитная. Ограничение изменений напряжения, колебаний напряжения и фликера в низковольтных системах электроснабжения общего назначения. Технические средства с потребляемым током не более 16 А (в одной фазе), подключаемые к электрической сети при несоблюдении определенных условий подключения. Нормы и методы испытаний

Условия хранения продукции в соответствии с ГОСТ 15150-69. Срок хранения (службы, годности) указан в прилагаемой к продукции товаросопроводительной и/или эксплуатационной документации.

**Декларация о соответствии действительна с даты регистрации по 14.06.2022 включительно**

  
(подпись)  М.П. Шаров Александр Анатольевич  
(Ф. И. О. заявителя)

**Регистрационный номер декларации о соответствии:** ЕАЭС N RU Д-DE.АЛ16.В.77754

**Дата регистрации декларации о соответствии:** 15.06.2017

Fig. 34: ЕАЭС N RU Д-DE.АЛ16.В.77754

## Notes



Hassellunden 11A, 2765 Smørum  
Tel. 45 95 04 10  
info@buhl-bonsoe.dk  
www.buhl-bonsoe.dk



**FISCHER Mess- und Regeltechnik GmbH**

Bielefelder Str. 37a  
D-32107 Bad Salzuflen

Tel. +49 5222 974-0

Fax +49 5222 7170

[www.fischermesstechnik.de](http://www.fischermesstechnik.de)

[info@fischermesstechnik.de](mailto:info@fischermesstechnik.de)